



PROGRAM SC180 & SC200

1. Turn on scanner.
2. Press manual.
3. To program Frequency:
 - a. Press channel #, ENTER
 - b. Press Freq. #, ENTER
4. To program Alpha:
 - a. Press DISPLAY until "a" appears, ENTER
 - b. Turn Alpha knob to desired character
 - c. Press up or down arrow to move to next space (up to 10)
 - d. Press ENTER
5. To program Private Line Code (SC200 only):
 - a. Press SUB until "CCTCDSS DCS" appears, ENTER
 - b. Turn Freq. knob to desired code, ENTER
6. To program next Freq./Alpha/PL, repeat steps 3-5.